

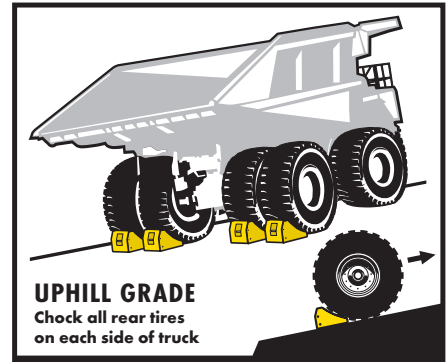
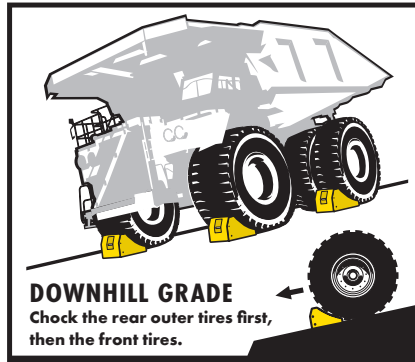
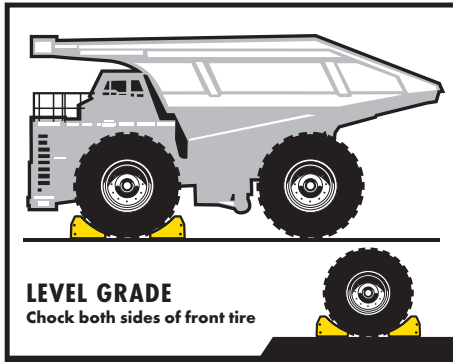
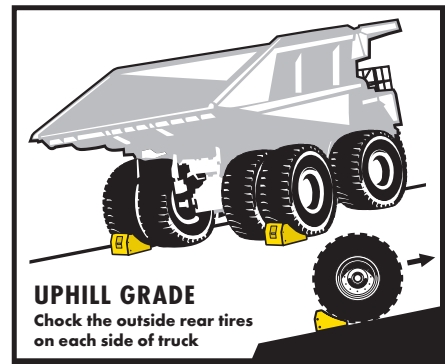





### Proper chocking procedures for payloads over 240 tons

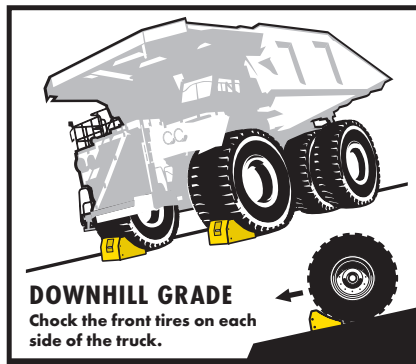




### Proper chocking procedures for payloads up to 240 tons

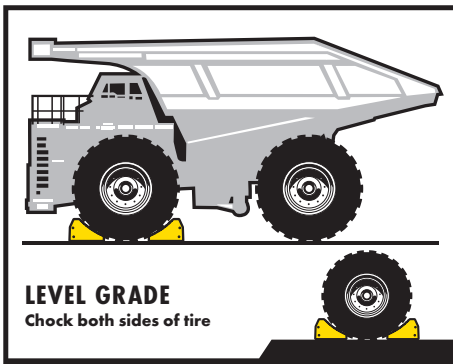

### Proper chocking procedures for articulated trucks

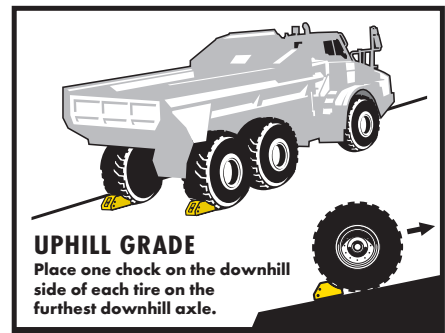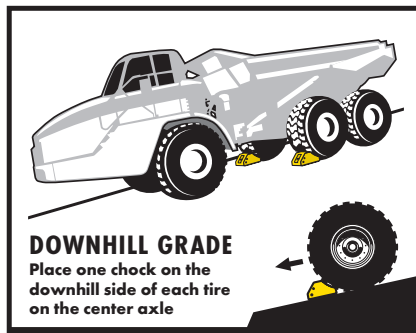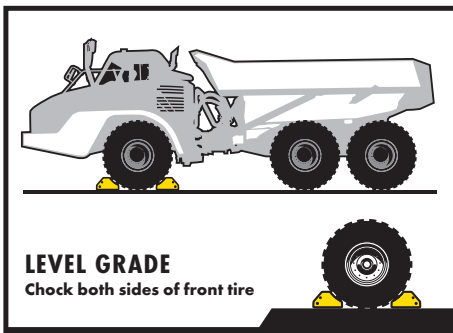

### Proper chocking procedures for vehicles with two or more axles

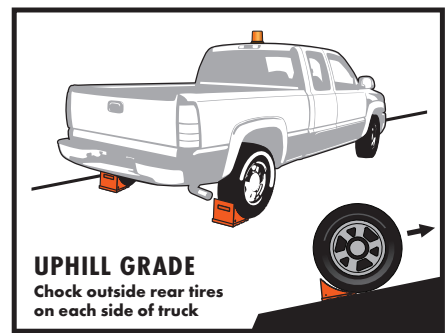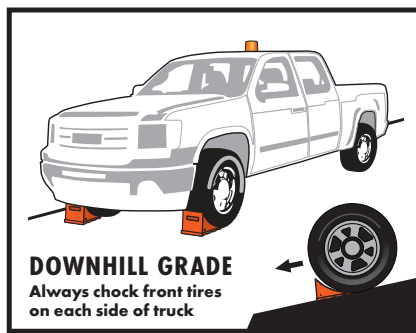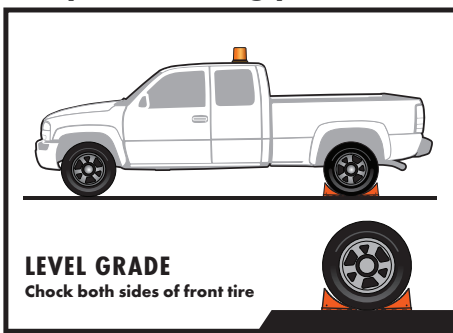

NOTE: Diagrams shown are for land vehicle use only.  
For more detailed information and for aviation chock user guidelines, visit [www.checkers-safety.com](http://www.checkers-safety.com).